

# 1.8 m / 6 ft Nutcracker with Music & LED Lights

ITM. / ART. 150941  
PRODUCT MANUAL

## IMPORTANT. RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

---

**This item is intended for Indoor and Outdoor use.**

If you have any questions or comments in the U.S. and Canada, or if there are missing or broken parts, please e-mail [service@mercasia.com](mailto:service@mercasia.com) (English, French & Spanish) or call Customer Service at 1-800-828-9316 (English only) from 9 a.m. – 4 p.m. EST, Monday – Friday (U.S. and Canada only). If you prefer, please send a letter to: MercAsia USA, Ltd., 1501 Gary St., Bethlehem, Pennsylvania 18018. If any parts are broken or lost during use, you can also order replacements through the above contact information.


### **WARNING: RISK OF FIRE AND ELECTRIC SHOCK**

- Make sure electrical cord is not connected to power before starting assembly.
- Keep wires clear from being pinched or cut during assembly or use. Discard products with cut wire insulation.
- This is not a toy. For adult use only. It should not be played with or placed where children can reach it.
- The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall discontinue function.
- Please read all instructions and warnings included with this product before using.

### **CAUTION: Stability hazard.**

### **INSTRUCTIONS FOR VOLUME CONTROLLER**

The volume controller is on the back side of the leg with a silver turning switch to adjust volume.

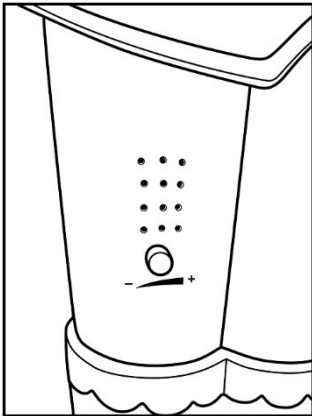

**Music plays 8 holiday songs in sequence as follows.**


1. Jingle Bells
2. We Wish You A Merry Christmas
3. Silent Night
4. Deck The Halls
5. Joy To The World
6. The First Noel
7. Hark! The Herald Angels Sing
8. O Christmas Tree

**TROUBLESHOOTING:****If lights do not turn on**

- Make sure there is power to the outlet and product is plugged in.
- Make sure the light plug is connected to the transformer, and make sure connector is fully inserted into transformer and tightened.
- Remove connector from transformer, clean contacts and reinstall.
- Check if unit is plugged into an outlet controlled by dimmer or electronic timer as unit will not work in these circuits; use a standard outlet instead.
- If connected to a GFCI controlled outlet, reset the GFCI in case it deactivated.
- Check for broken wires/connections.

**CARE INSTRUCTIONS:**

- Store unit in cool, dry location protected from sunlight. Avoid stacking assembled items to avoid bulb breakage or other damage. Make sure all plugs and cords are well-protected from being cut, crushed, or abraded between parts.

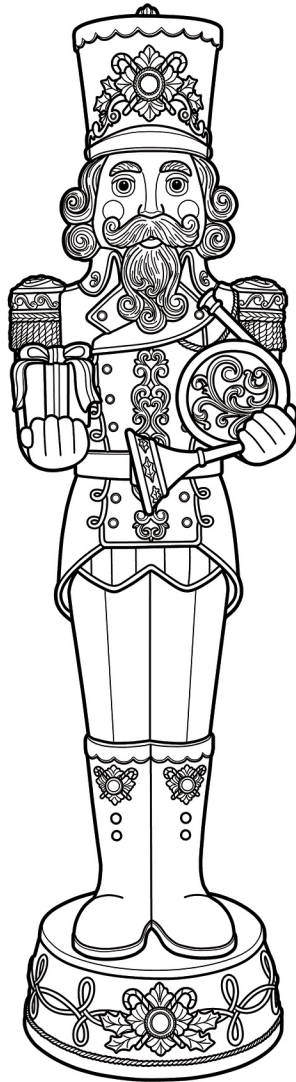

1.8 m  
6 ft  
6 pi

47.5 cm  
18.7 in  
18.7 po

50.0 cm  
19.6 in  
19.6 po